Utilize the header and footer design areas to include comprehensive text descriptions, linked text, legends, imported image files, or drawing objects. You can set the header and footer areas to be any size you wish.

You can create an exceptional and impressive borehole and cross section views by importing company logos, icons, and maps. You can also speedily create text, legends, scale bars, polygons, polylines, and symbols. Create well headers over your cross section to display information about each borehole. Add text objects in header and footer areas that are linked to your data, such as borehole name, page numbers, column contents, column units, or column descriptions. When the borehole information is changed, this information automatically updates. All items can be fully modified, including font, color, size, fills, width, etc.

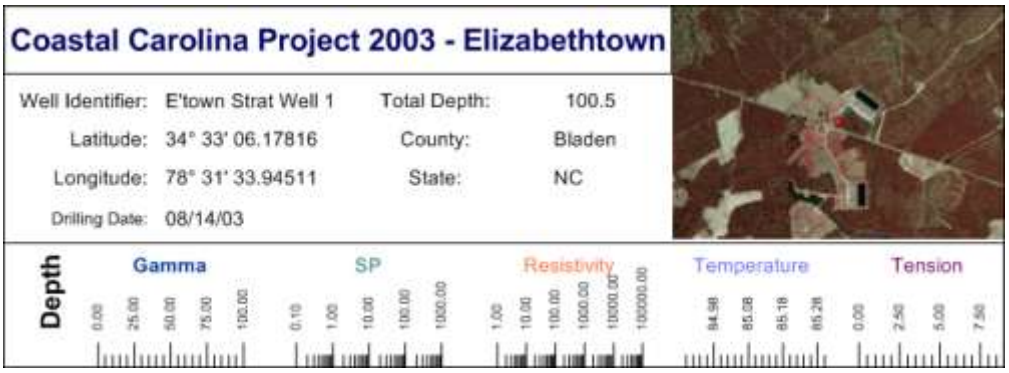

Create informative headers that display detailed information about the project, such as project name, company name, driller or well identifier, location, drilling date, and imported graphics (e.g. company logo or site map).

Save a detailed header, footer and log design to a template file, so you don't have to recreate it!